






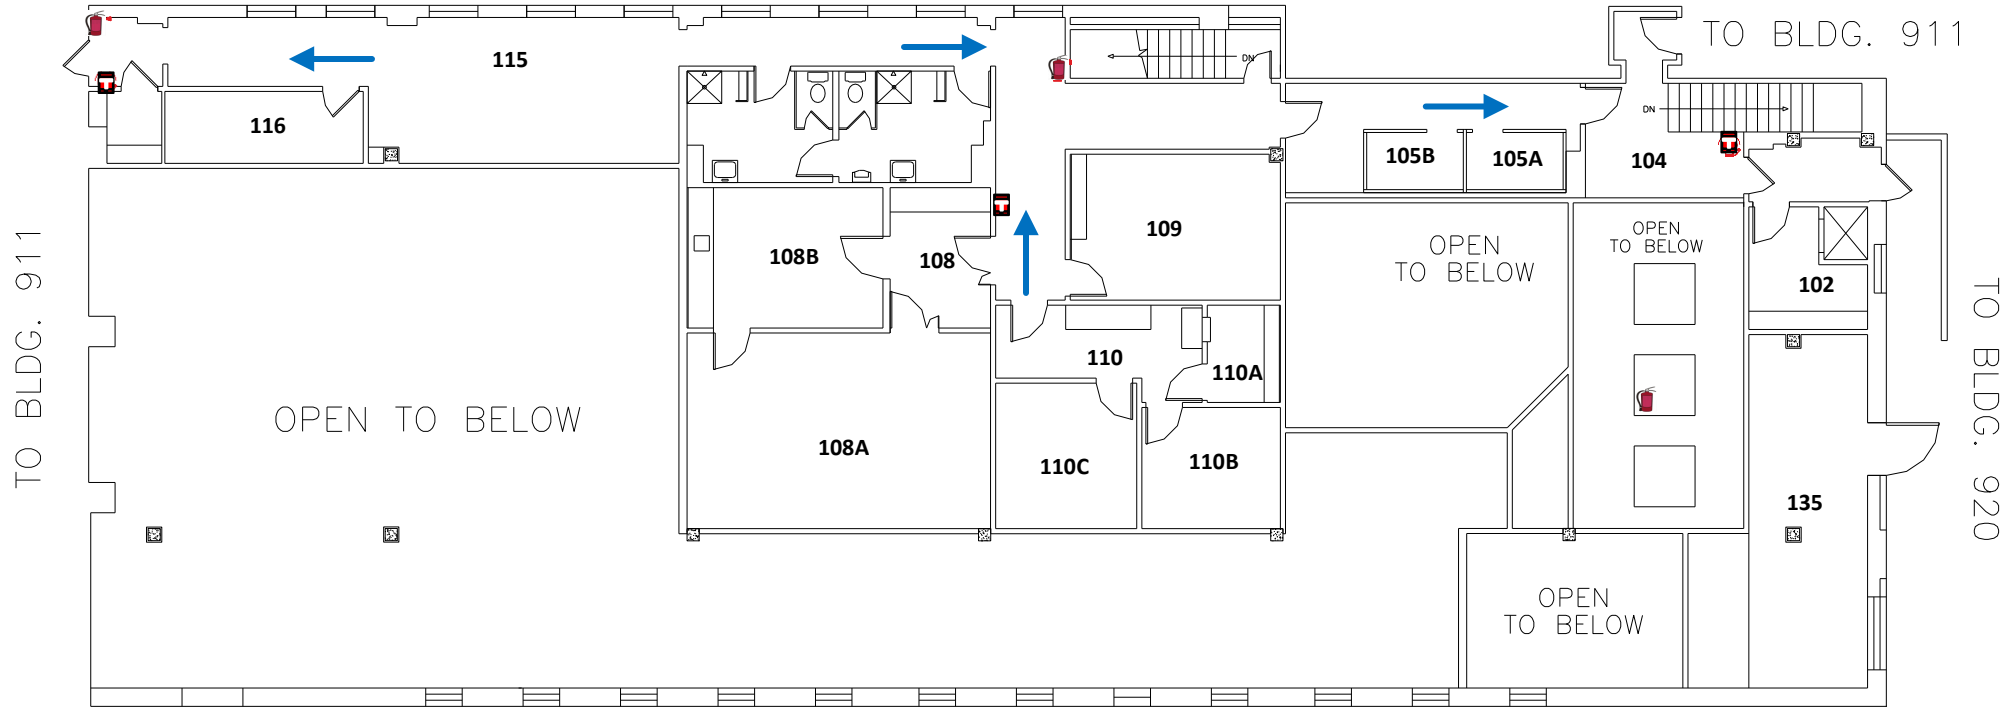

EMERGENCY EVACUATION ROUTE

Building Code: 918
Building Name: NMR Laboratories
Floor Name: First Floor
Building Address: 830 S Wood Street



Evacuation Assembly Area:

The "north/south" walkway which is located "south" of the NMR Laboratories building.

	Stairway		Exit Pathway
	Fire Extinguisher		Storm Refuge Area
	Fire Alarm Pull Station		AED Location