






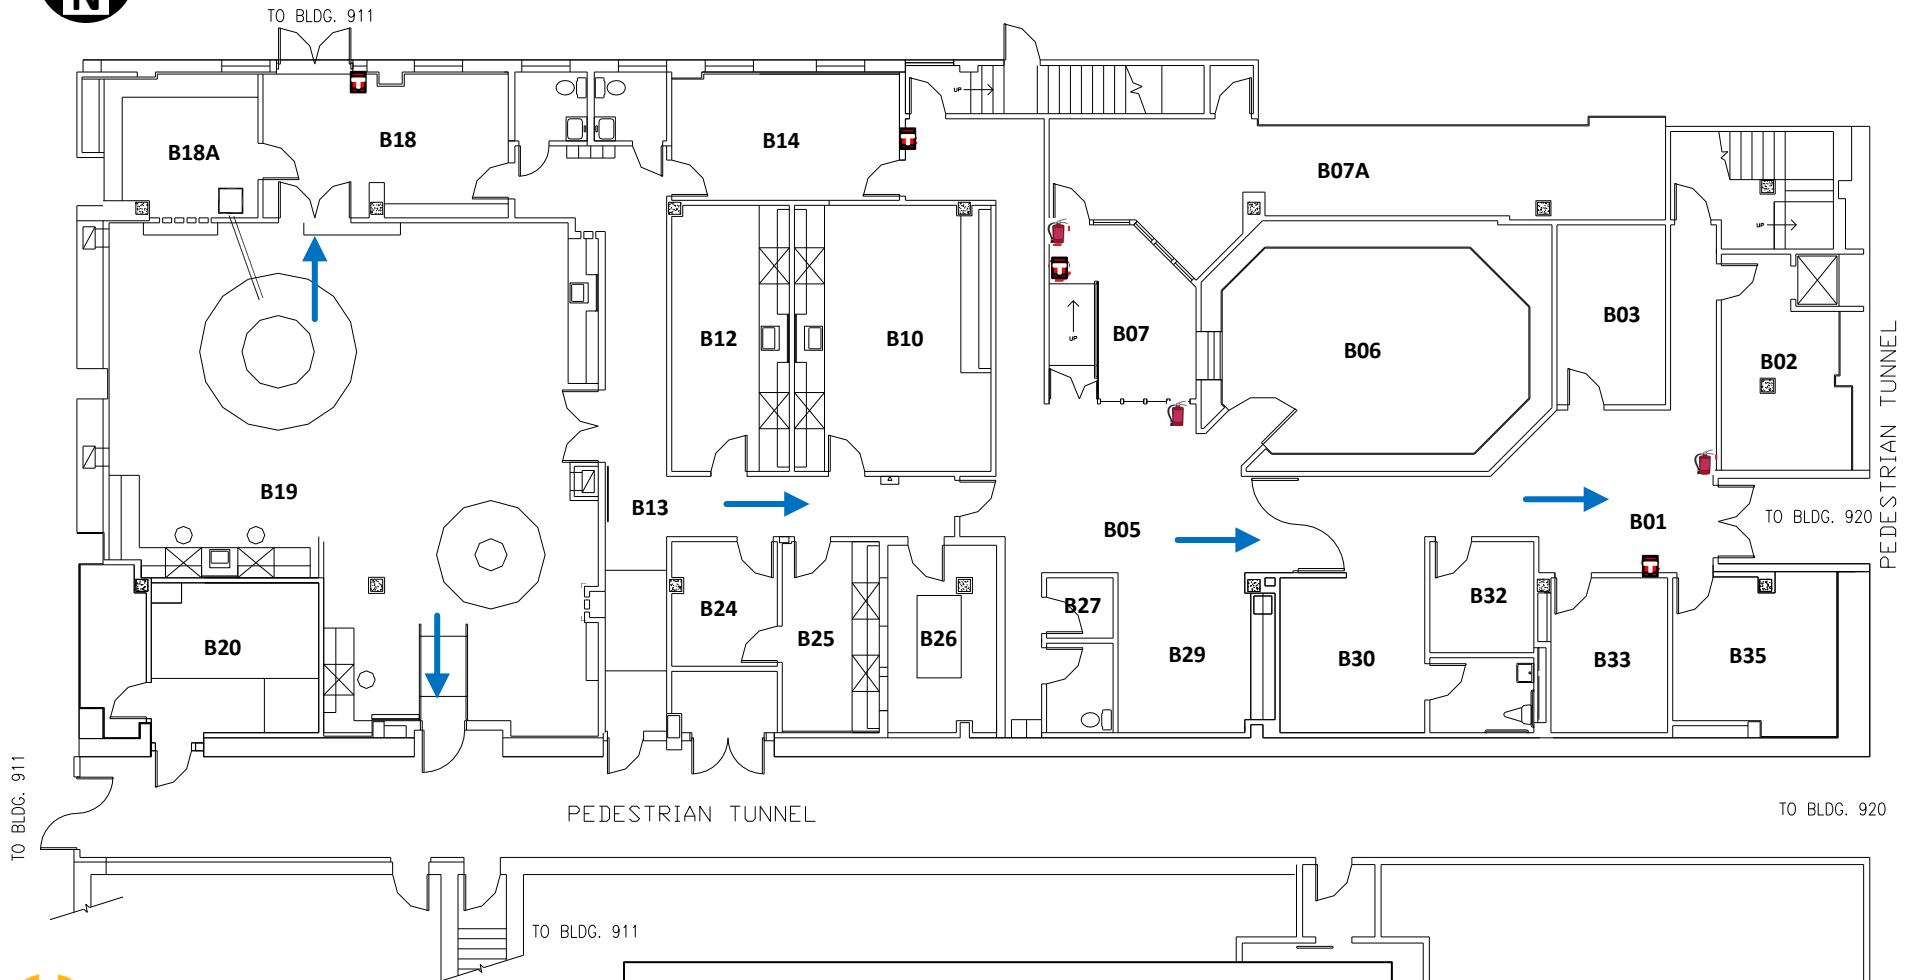

EMERGENCY EVACUATION ROUTE

Building Code: 918
Building Name: NMR Laboratories
Floor Name: Basement
Building Address: 830 S Wood Street




Evacuation Assembly Area:

The "north/south" walkway which is located "south" of the NMR Laboratories building.

| | | | |
|---|-------------------------|---|-------------------|
|  | Stairway |  | Exit Pathway |
|  | Fire Extinguisher |  | Storm Refuge Area |
|  | Fire Alarm Pull Station |  | AED Location |

**OFFICE OF
 THE VICE
 CHANCELLOR
 FOR
 ADMINISTRATIVE
 SERVICES**

