






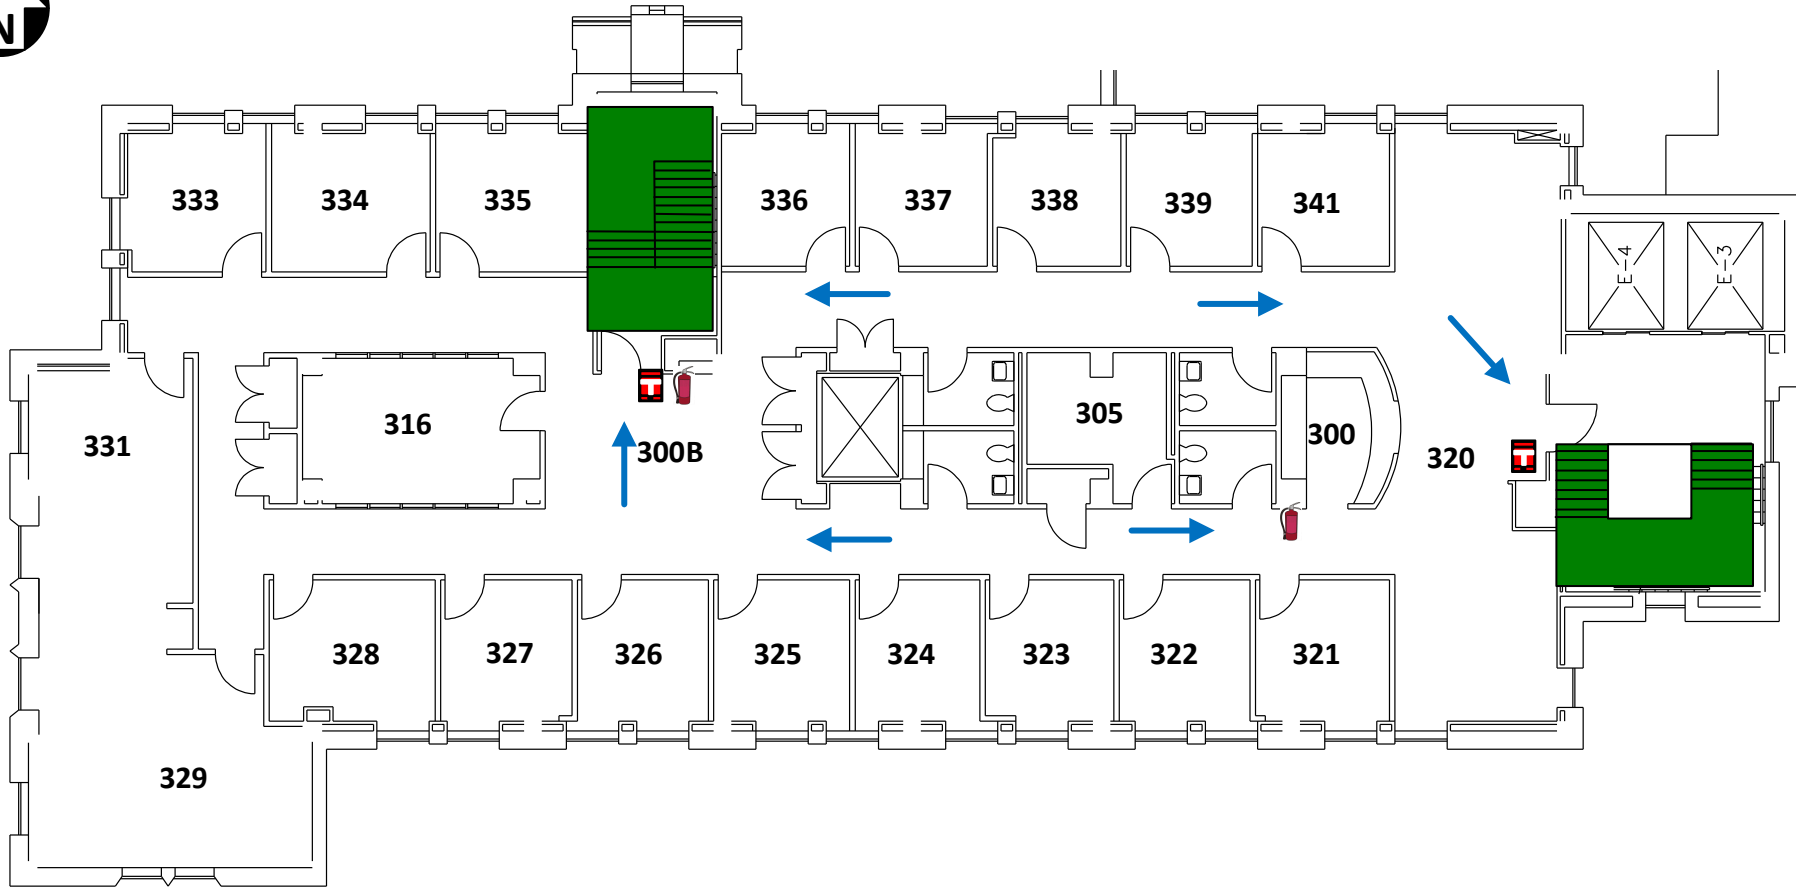

EMERGENCY EVACUATION ROUTE

Building Code: 950
 Building Name: Neuropsychiatric Institute
 Floor Name: Third Floor South
 Building Address: 912 S Wood Street



Evacuation Assembly Area:

The sidewalk on the "east" side of Wood Street located across the street from the Neuropsychiatric Institute building.

	Stairway		Exit Pathway
	Fire Extinguisher		Storm Refuge Area
	Fire Alarm Pull Station		AED Location

**OFFICE OF
 THE VICE
 CHANCELLOR
 FOR
 ADMINISTRATIVE
 SERVICES**

